

Care@Home™

Voice Panic Detector (VPD)

Getting Started

A smart emergency response device with **Intelligent Voice Activation™**



In an emergency



Call out the trigger phrase

OR



Press
Emergency Call

OR




Pull the cord out



Installing the VPD

- 1 Open the VPD device

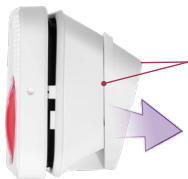

Hold here and pull off the back cover

- 2 Press the Pairing button on the Care@Home™ control panel

Control Panel



Pairing Button

- 3 Move the VPD at least 2 m (6.5 ft.) from the control panel

Control Panel



2 m (6.5 ft.)



VPD



- 4 Insert the batteries and wait for the control panel to beep



- 5 Close the VPD

Tamper switch



Tamper pin

On a wall

1 Clean and dry the surface

3 Peel the strips off the mounting tape and press the VPD into place



2 Remove desk mount



4 Insert the cord



On a table

1 Place in a convenient place, like a living room table or bedroom night stand.



Press **Emergency Call** to test the VPD. The installation is complete.

Wall Installation



Table Installation



For more information, see: <http://www.essence-grp.com/resources/smart-care-download.html>
Legal notice: http://www.essence-grp.com/html/concerning_documents.html
www.essence-grp.com • info@essence-grp.com

