



# WeR@Home™

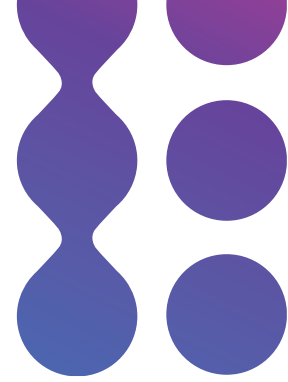

## Installing WeR@Home™ in three easy steps

### 1 Set up the hub

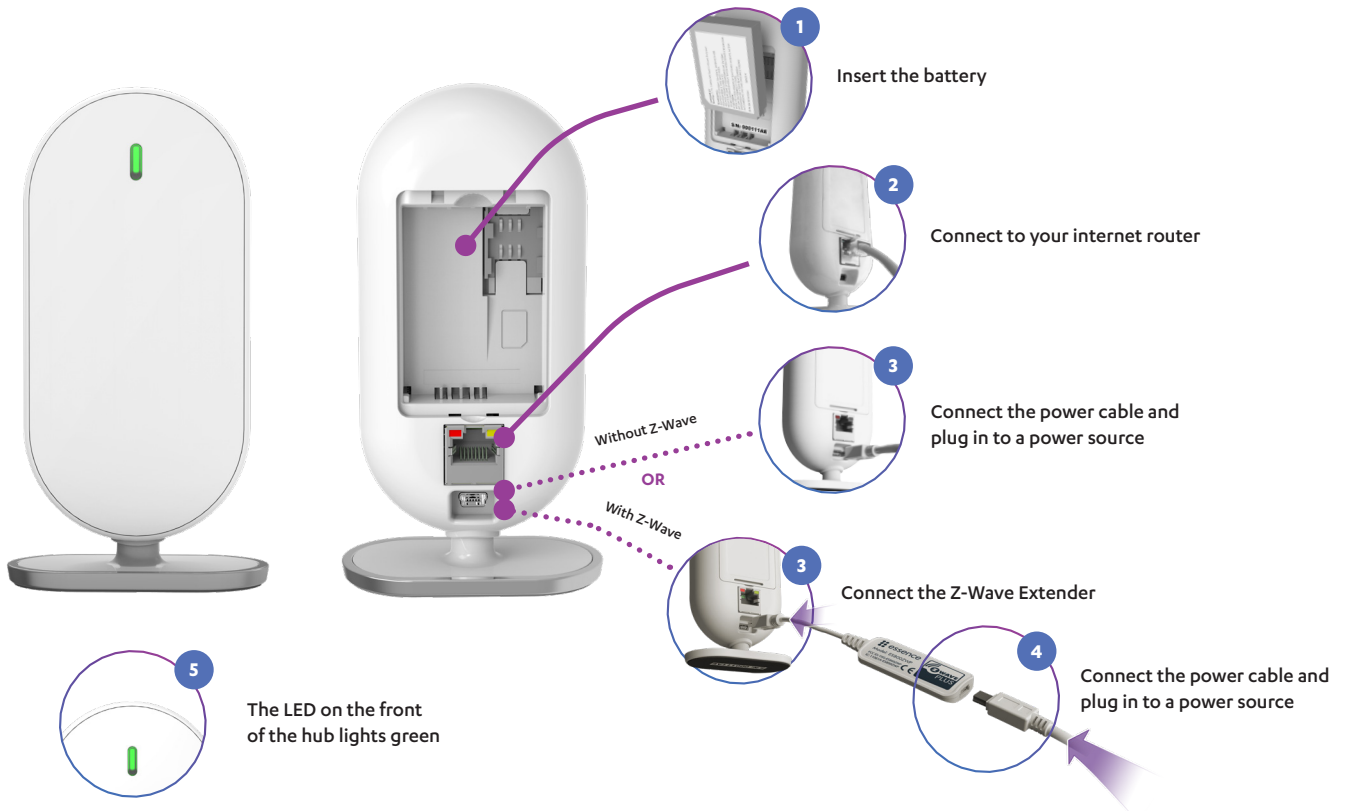


### 2 The WeR@Home™ app

Download the **WeR@Home™** iOS or Android app. Follow the on-screen instructions to register the hub. The app assigns a default PIN code of 1234.



Scan to download the app

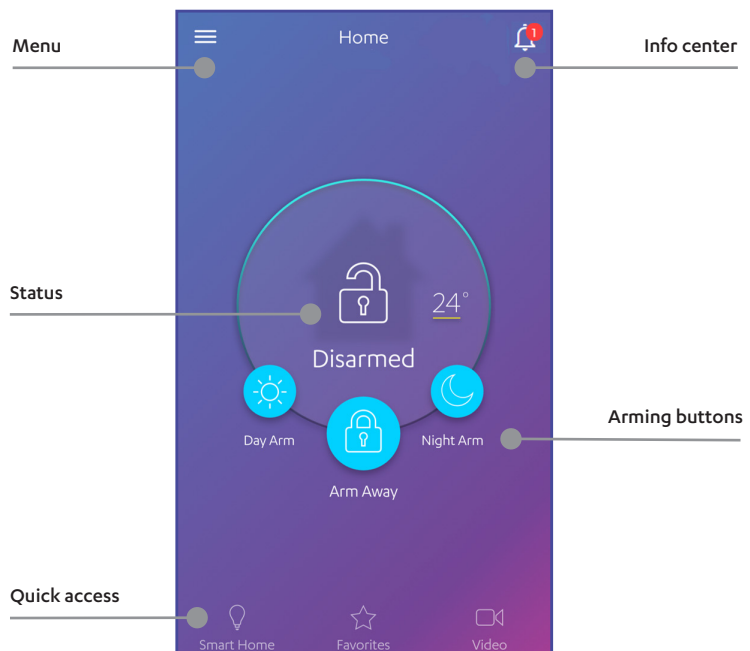

# 3

## Install the peripheral devices

### Install the camera and motion detector



Camera




Motion Detector

1




Remove the mounting base

2

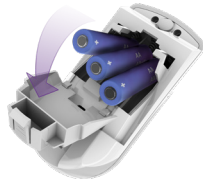

Remove the back cover (camera only) and insert the batteries

3

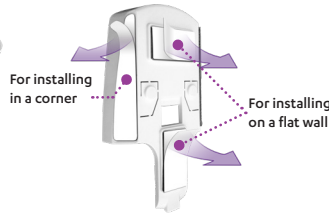

Peel off the strips. Only use the adhesive tape needed for the installation (flat wall or corner)

4



Press the mounting base against the wall or corner and insert the device

#### Location:

- Between 2.1 m (6.9 ft.) to 2.3 m (7.5 ft.) high
- A clean, dry, smooth, and flat wall, or in a corner
- Spherical lens facing downward
- Not facing windows, sunlight, or a strong light source
- Within 6 m (20 ft.) of the coverage area


### Install the siren

1




Remove the mounting base and insert the batteries

2

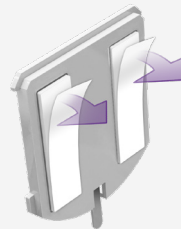

Replace the mounting base and peel the strips off the adhesive tape


3

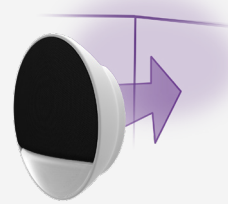

Press the siren against the wall

### Install the door/window sensor

1

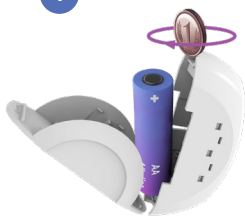

Open the sensor and insert the battery

2




Peel off the protective strips

3



Align the two units using the dots

4

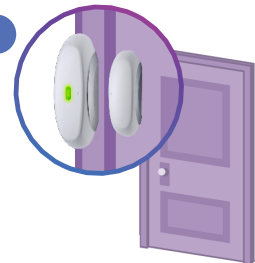

Press one unit on the door or window and the other on the frame

### Register the remote control (key fob)

- 1 Press any button a few times to discharge the device
- 2 Open the battery cover
- 3 In the app, tap and then **DEVICES**.
- 4 Tap **Add device**, select **Remote Control**, and assign a user
- 5 Insert the battery and close the cover

2



5



To install additional devices: in the app, tap and then **DEVICES**. Tap **Add device**, and follow the on-screen instructions.

For more information about installing and using the WeR@Home™ system, see <http://www.essence-grp.com/resources/smart-living-download.html>

